

Folded line - - - - -

Diecut _____

8.5cm

85cm

8.5cm



Instruction Manual



 
ANC Earbuds



For the best sound quality and noise-reduction, we recommend choosing the most comfortable ear tip from the 3 included sizes.



Comfortable silicone ear tip

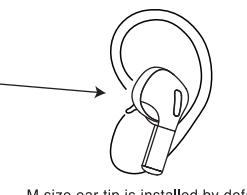

M size ear tip is installed by default

 
 
Features

- Active Noise Canceling (ANC)
- Dual microphones
- Bluetooth 5.0
- Earbud battery capacity: 35mAh Li-polymer
- Charging case battery capacity: 220mAh Li-polymer
- Frequency response: 50-20KHz
- Connectivity range up to 33 feet / 10 meters
- ANC chipset
- Type-C port for charging case
- Wireless charging case
- Replaceable proprietary silicone in-ear ear tips (S/M/L)
- Water resistant IPX4




Packaging Contents

- Box
- Instruction manual
- 2x Earbuds
- Charging case
- Type-C to USB-A charging cable
- 1x Pair of small size silicone in-ear ear tips
- 1x Pair of large size silicone in-ear ear tips

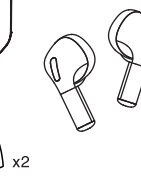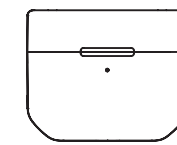

S x2 L x2

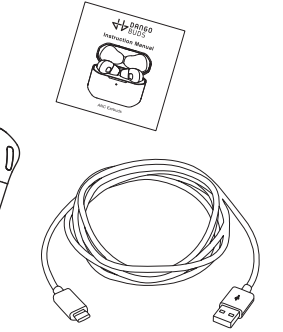 

Specifications


Bluetooth version	V 5.0
Bluetooth protocol	A2DP, AVRCP, HFP
BT profiles support	SBC/AAC
ANC noise reduction range	50Hz-3KHz
ANC noise reduction amplitude	About -25dB
Frequency response	50Hz-20KHz
Working distance	33 ft / 10 m
Battery capacity	35mAh (earbuds), 220mAh (charging case)
Input	DC 5V
Working temperature	0°C to 40°C (32°F to 104°F)
Weight	7.7g (earbuds), 40g (case + earbuds)
Size	32 x 24 x 17mm (earbuds), 60 x 49x 24.5mm (case)
Water resistance rating	IPX4

Up to 9 hours of playing time

Once fully-charged, your DangoBuds can play continuously for 3 hours, and with the charging case, you can have them play for 9 hours.

Wireless Charging Case

 Charging your DangoBuds is easy. Just place your earbuds in the correct slot, and they will magnetically sit in place. You can charge the case itself using the included USB-C charging cable or charge it wirelessly.

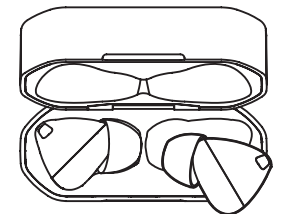

Pairing

- When pairing your DangoBuds for the first time, open the charging case cover.
- Then, open your Bluetooth options on your device and look for **DangoBuds**.

 
NOTE

- After your first pairing, your DangoBuds should connect automatically. If not, simply repeat the first-time pairing steps again.
- Once you've done listening, all you need to do is put your earbuds back into the charging case. They will start charging automatically.




Button Operation For Both L & R Earbuds

- Press and hold for 3 seconds to turn Active Noise Cancellation on/off
- Press and hold for 3 seconds to hang up or reject a phone call
- Single-tap to play/pause or answer the phone
- Double tap to skip to the next song
- Triple tap to go back to the previous song

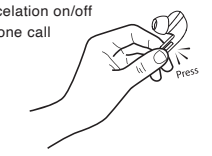

Charging

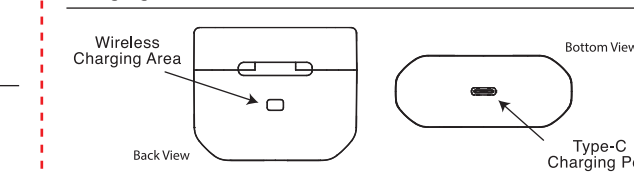 

You can either use the included USB cable or a wireless charger (not included) to charge the charging case.

LED Indicator

- Red: Battery low (30% or less)
- Orange: Battery charged (30%-95%)
- Green: Battery Full
- It takes approximately 90 minutes for your case and DangoBuds to charge.

Earbuds

- The charging case can be charged via Type-C cable or wireless charger
- Full charge for earbuds: about 90 mins



Working / Charging Time (From Full Charge)

Playing music with ANC on	2.5 hours
Playing music with ANC off	3.5 hours
Standby time	72 hours
Talking time	2.5 hours
Time needed to charge earbuds	1.5 hours
Time needed to charge case	1-1.5 hours

NOTE

- You can charge your DangoBuds twice from a fully-charged charging case.

Safety Instructions

- Keep your DangoBuds and charger out of direct sunlight or in areas that are extremely hot, humid, or dusty
- Using your DangoBuds at high volume may have a negative effect on your hearing
- Keep your DangoBuds from coming in contact with excessive physical damage
- Earbuds are IPX4 (splashproof) – do not submerge in water
- To clean, use a soft, dry cloth
- Do not attempt to disassemble or modify any parts of the product
- Keep away from children



FAQ

- I can't find or connect my device to my DangoBuds**
 - Turn your Bluetooth off and on again, then try searching again
- My DangoBuds are disconnecting or cutting out.**
 - There may not be enough battery – try charging your earbuds again
 - You may be too far away from your device – remember the distance is roughly 33 feet (10m)
 - There may be a wall or large object between your device and your earbuds

Troubleshooting

Factory Reset

Put your DangoBuds into the charging case and leave the cover open. Long-press the button behind the charging case until the indicator light turns red and then green.

CAUTION: Swollen Lithium-Ion Polymer Batteries

If the batteries appear swollen, do not attempt to replace



Customer Service

Thanks for purchasing DangoBuds!
If you have any issues or questions, our customer support team is happy to help!

Country	Country Phone Number
United States & Canada (Toll Free)	855 219 4892
Australia / New Zealand	(02) 5133 5668
United Kingdom	033 0818 0828
Germany	0800 5855439
France	0185 16 9221

Support email: support@buydangobuds.com

FCC Compliance Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID : ZAVK9-30426-30427

Made in China